





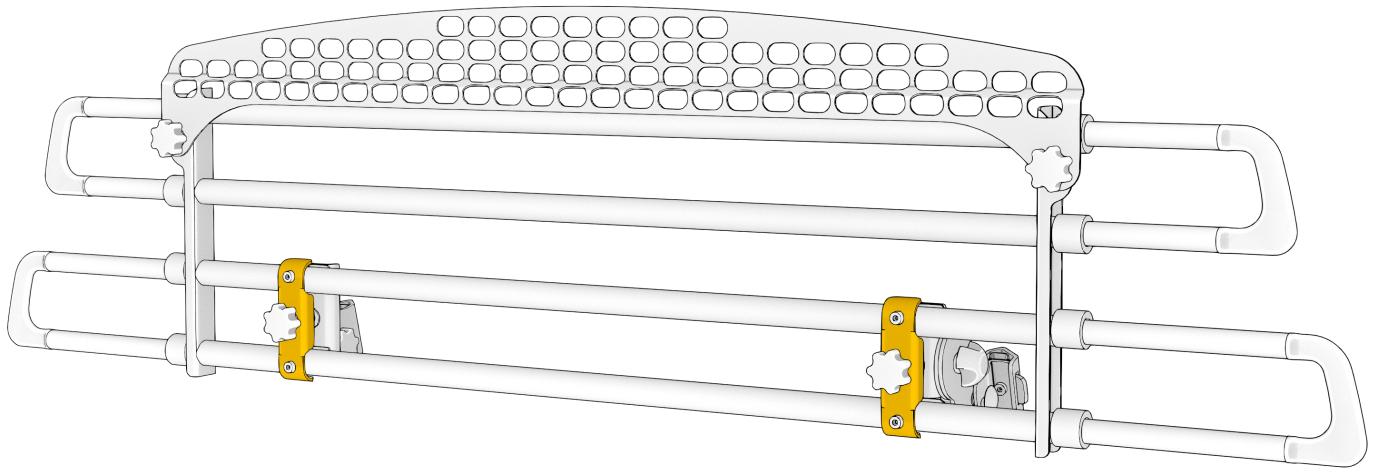


VarioBarrier Headrest G4 Small

ASSEMBLY INSTRUCTIONS








Scan to see the
video of these
instructions

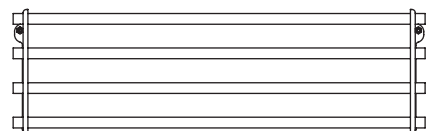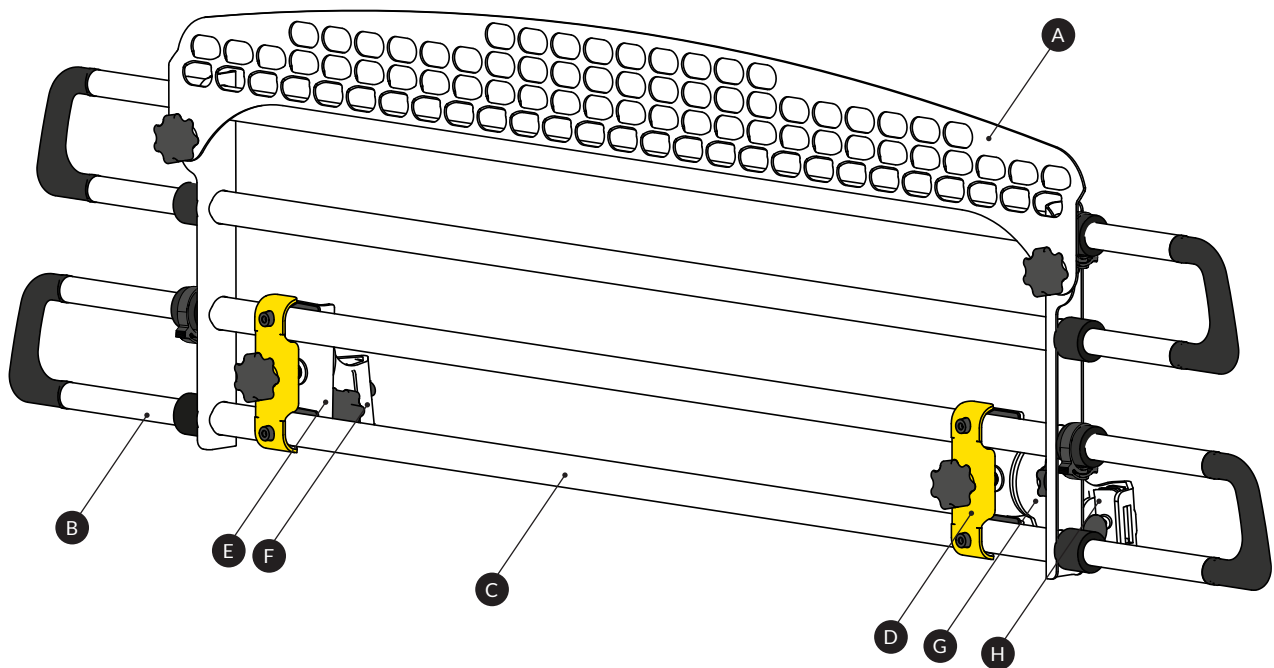

A	F310E	1X
	Part no	No of items

B	F521	4X
	Part no	No of items

C	FS444	1X
	Part no	No of items

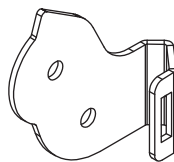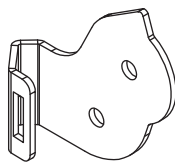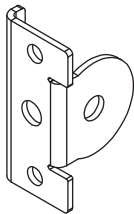



D	F310A	2X
	Part no	No of items

E	F310B	2X
	Part no	No of items



F	F310CL	1X
	Part no	No of items

G	F310CR	1X
	Part no	No of items


H	F310D	2X
	Part no	No of items

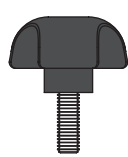M-10700 4X  OPTIONAL	M-R3015M8S 2X 	M-460641BF 2X  rubber	M-460641D 12X  rubber	M-460641AY 8X  rubber end caps	M-460641AL 8X  plastic end caps
M-R3015M835S 2X 	M-SR4025M820S 2X 	M-R3015M610S 2X 	M-VBM8x30S 2X 	M-VBM8x35S 2X 	



STEP
1

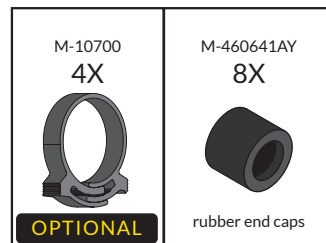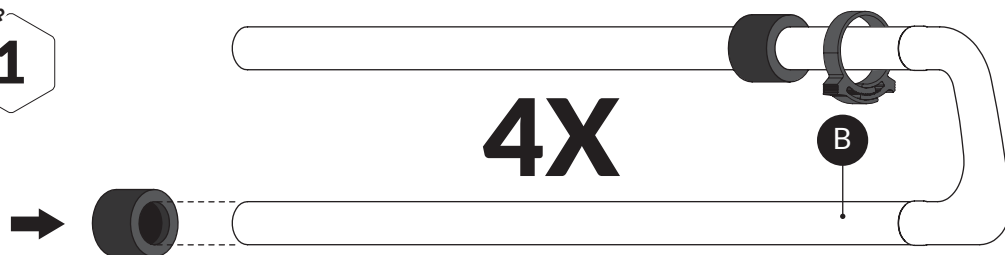


STEP
2

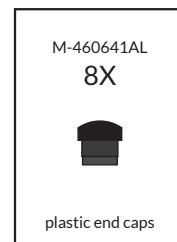



STEP
3

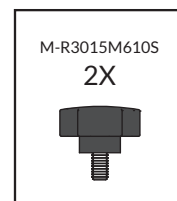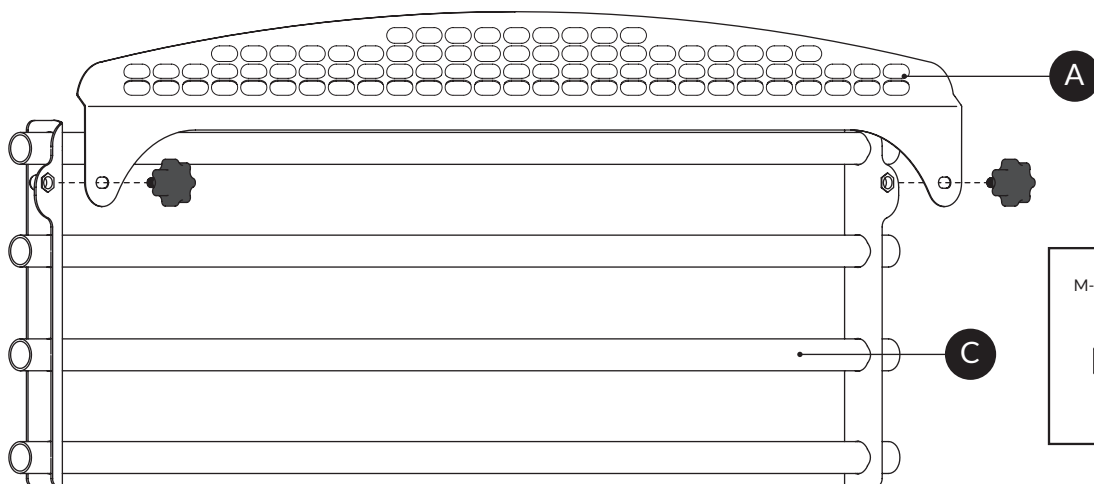

STEP
4

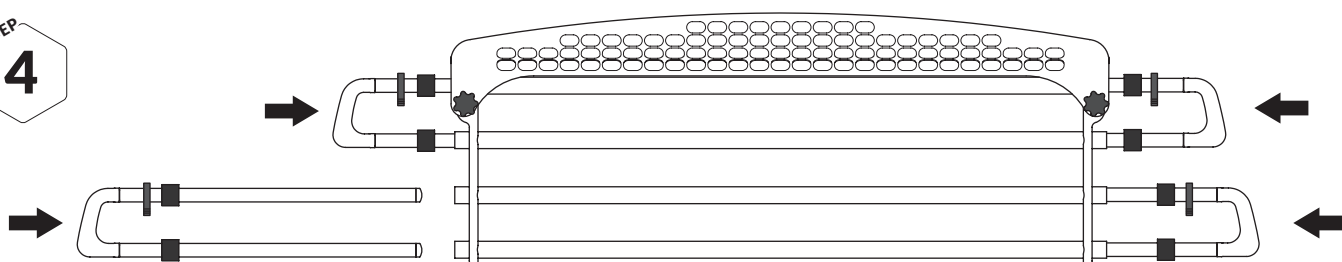


STEP
5

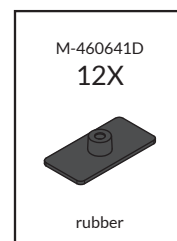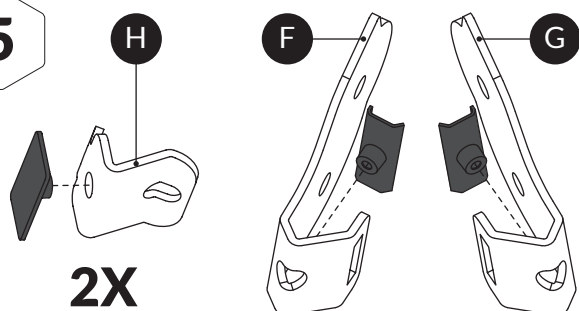


2X

2X

STEP
6

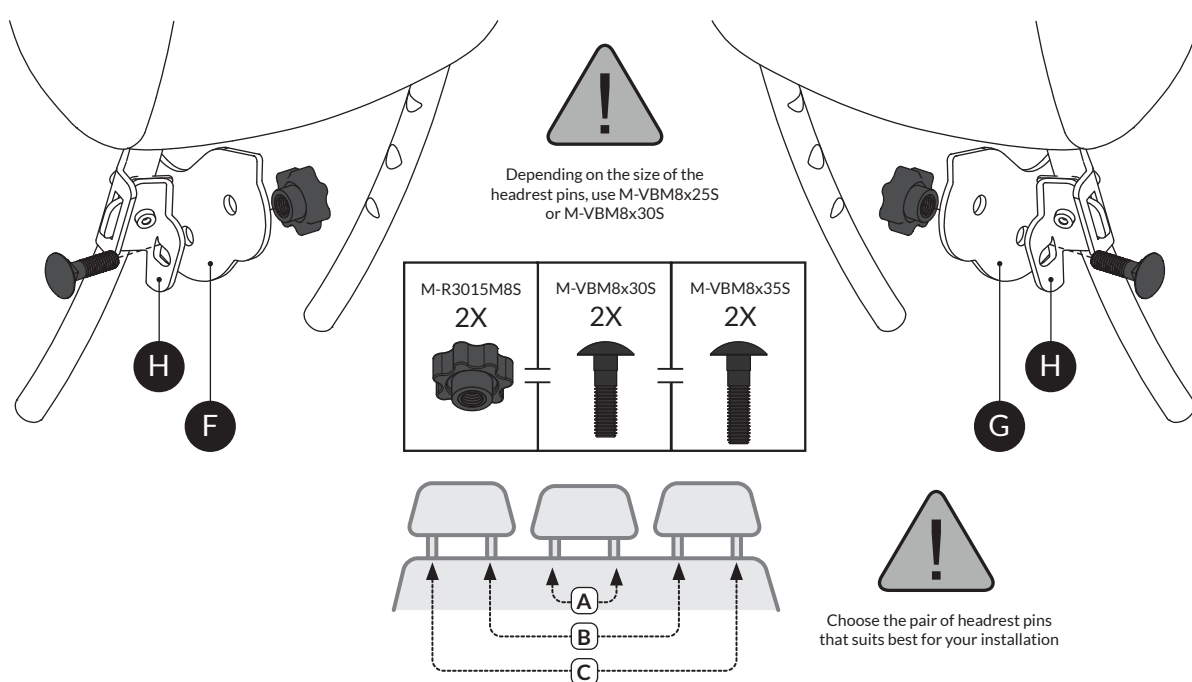

STEP
7

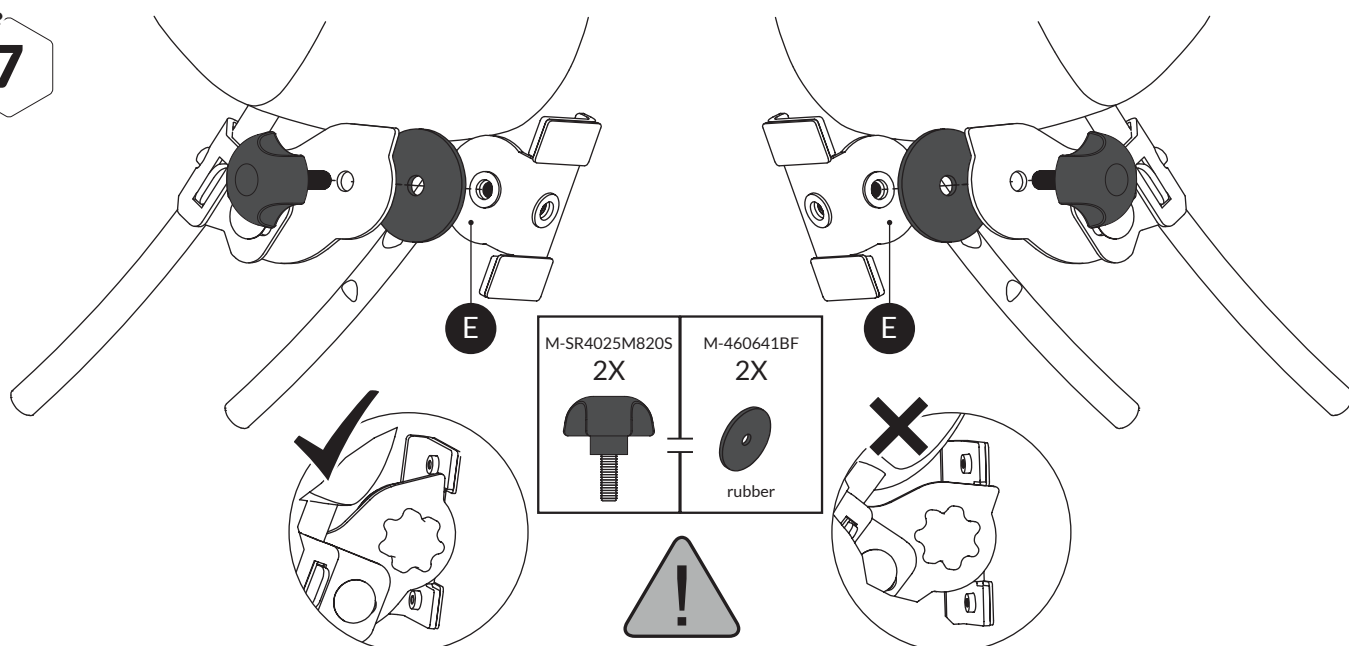

STEP
8

